


1) Remove knob

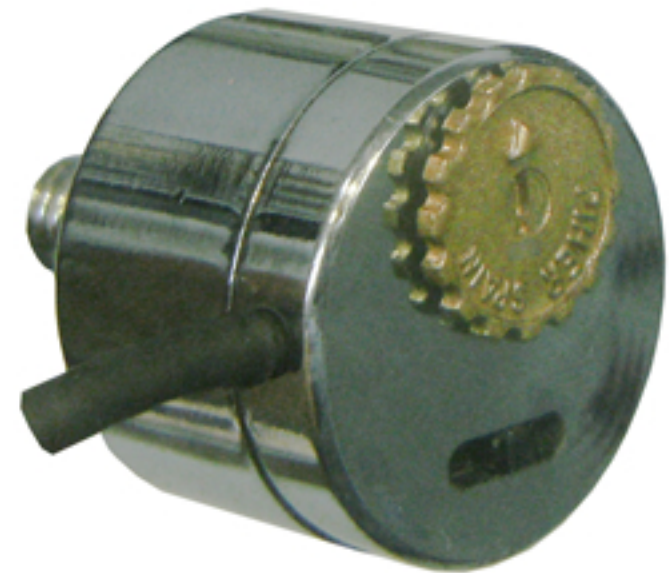

2) Lubricant potentiometer



3) Turn left - right